

















OPERATOR INSTRUCTIONS

<p>Control panel mode</p> <p>Alarm mode</p> <p>-Optical-acoustic devices active</p> <p>-LED Fire on</p> <p>-Buzzer ON</p>	<p>Press ENTER + user access code + ENTER to access level 2.</p> <p>Press  Buzzer Silence to switch off the buzzer.</p> <p>To switch off optical-acoustic devices:</p> <p>Press  Sounders Activate/Silence.</p> <p>To view all alarm messages:</p> <p>If there is more than one message, the LED is steadily lit or flashes.  Fire</p> <p>Press  Fire to view the next event.</p> <p>if no action is taken for 20 seconds, the first event will come up again.</p> <p>Once the conditions that generated the alarm stop:</p> <p>Run the reset procedure.</p>
<p>Acceptance</p> <p>-LED Sounders Activate/Silence steadily lit</p> <p>-Buzzer ON</p> <p>Investigation</p> <p>-LED Sounders Activate/Silence flashing</p> <p>-Buzzer ON</p>	<p>Press ENTER + user access code + ENTER to access level 2.</p> <p>Press  Sounders Activate/Silence before the acceptance time ends to move to the recognition stage.</p> <p>Investigate the affected area to check that it is not a false alarm.</p> <p>To cancel the alarm:</p> <p>Go back to the control panel and run a reset procedure before the recognition time ends.</p> <p>To confirm the alarm:</p> <p>If you are still at the acceptance stage, press  Sounders Activate/Silence to move to the recognition stage</p> <p>Press  Sounders Activate/Silence to silence active sounders.</p> <p>Press  Sounders Activate/Silence to activate all sounders.</p> <p>Alternately, let a timer countdown end.</p>
<p>Control panel mode</p> <p>Fault</p> <p>-LED Fault on</p> <p>-Buzzer ON</p>	<p>Press ENTER + user access code + ENTER to access level 2.</p> <p>Press  Buzzer Silence to switch off the buzzer.</p> <p>Press  System Reset.</p> <p>If the faults keep being reported:</p> <p>Press  Buzzer Silence to switch off the buzzer.</p> <p>If there is more than one message, the LED is steadily lit or flashes.  Fault</p> <p>Press  Fault to view the next event.</p> <p>Signal the faults to an authorized maintenance engineer.</p> <p>Follow his/her instructions and organise a repair service.</p> <p>Press ESC to go back to level 1.</p>
<p>Reset procedure</p>	<p>Procedure used to stop the acknowledgement/investigation countdown and to cancel existing maintenance requests and alarm and fault events.</p> <p>Press ENTER + user access code + ENTER to access level 2.</p> <p>If the sounders are active, press  Sounders Activate/Silence.</p> <p>Press  System Reset.</p> <p>Press ESC to go back to level 1.</p>
<p>Evacuation procedure</p>	<p>Procedure used to enter the alarm status manually.</p> <p>Press ENTER + user access code + ENTER to access level 2.</p> <p>Press  Sounders Activate/Silence.</p> <p>Press ESC to go back to level 1.</p>

Keep a copy of this page near each keypad.